

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Preamble

- An Infection Control Professional is required to provide overall supervision of the discharge cleaning process.
- Prior to terminal cleaning, patient care supplies and linens will be discarded from patient room, including the supply cart contents in patient room and anteroom.
- Perform waste management in both the patient room and anteroom so that EvS can begin process with empty blue drums. Ensure sharps container and red waste pail (if present) are also removed at this time: [Waste Removal BLUE DRUM](#); [Waste Removal ANTEROOM](#)
- Thoroughly inspect wall fixtures for any gross soiling and if present, consult Facility Management for steps to be taken (e.g. disposal)
- Only 1 person at a time shall enter or exit a room
- Throughout the checklist, IP&C approved disinfectant will be referred to as disinfectant
- Anteroom door is the door between the hallway and anteroom
- Patient room door is the door between the anteroom and patient room
- Glove hygiene process
 - Immerse gloved hands into basin and rub together in disinfectant solution without splashing
 - Pat gloves dry with disinfectant wipe(s)
- Equipment and/or tools required:
 - Blue drum
 - Red waste bin
 - Plastic bag to carry supplies
 - Red biomedical waste bags
 - Disinfectant solution (4-6 bottles)
 - Organic liquid solidifier
 - Housekeeping pail (1)
 - Zip ties
 - Vocera as required
 - Absorbent pads (multiple)
 - Two 4-foot strips from absorbent pad roll
 - Mop handles (2)
 - Microfiber mop heads (replenish as required)
 - Toilet brush and holder
 - Ultraviolet germicidal irradiation (UVGI)
 - Nocospray System

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

- Ladder
- Crevice brush
- Cleaning cloths
- Dust pan and brush
- A two-step stool rated for 225-pound weight capacity if needed for anteroom
- Additional PPE required: heavy duty rubber gloves
- Ensure all required materials are available in the room or are inspected and available to bring into the room before Environmental Services (EvS) enters

Note: this terminal clean is a labor-intensive process and the EvS Aides may quickly become overheated or fatigued. Check in frequently with the Aide to determine when a break is required. A maximum time limit of 15 minutes is recommended.

Legend

EvS Monitor ▽
EvS Aide 1 ◆
EvS Aide 2 ●
EvS Aide 3 ▲
Monitor ▲
Assistant 1 Ω

Process:





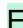




1. EvS Monitor ▽		
	PREPARATION	Considerations
	Once supplies are gathered, direct EvS Aide 1 ◆ and EvS Aide 2 ● to don PPE following the Primary Donning PPE checklist	<div style="background-color: #f08080; padding: 2px;">EvS Monitor ▽</div> to hold open anteroom door as needed for EvS Aides to enter one at a time
	EvS Aide 1 ◆ : Enter the anteroom and proceed directly into the patient room with supplies and place supplies on top of supply cart	
	EvS Aide 1 ◆ : Hold open patient room door	
	EvS Aide 2 ● : Enter patient room with ladder	
	EvS Aide 1 ◆ : Close patient room door	
	EvS Aide 1 ◆ and EvS Aide 2 ● : Remain in place until EvS Monitor ▽ moves to patient room window	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

2. EvS Monitor ▾

PATIENT ROOM CLEANING/DISINFECTION		Considerations
Ceiling/Upper Wall:		<p>Perform glove hygiene prior to accessing new cleaning cloths/microfibers from the housekeeping pail</p> <p>Replace microfiber mop head and cleaning cloths as needed to ensure saturation with disinfectant</p> <p>Use microfiber and cleaning cloths only once (do not double dip into solution)</p> <p>Discard used microfibers and cleaning cloths in blue drum</p> <p>For safety, do not climb up and down the ladder with mop or cleaning supplies in hands</p>
	EvS Aide 2👤: Position and set up the ladder in corner near sink	
	EvS Aide 1👤:	
	<ul style="list-style-type: none"> Remove housekeeping pail from plastic bag and place on the glove hygiene table 	
	<ul style="list-style-type: none"> Fill the pail with disinfectant solution 	
	<ul style="list-style-type: none"> Soak absorbent pad in pail filled with disinfectant 	
	<ul style="list-style-type: none"> Remove the absorbent pad from pail, squeezing it to remove excess disinfectant 	
	<ul style="list-style-type: none"> Place absorbent pad on floor to use as a clean surface when attaching the microfiber to the mop handle 	
	<ul style="list-style-type: none"> Place cleaning cloths and microfiber mop heads in the housekeeping pail 	
	<ul style="list-style-type: none"> If needed, add more disinfectant to pail to ensure cloths and microfibers are saturated 	
	<ul style="list-style-type: none"> Remove microfiber mop head, squeezing out excess disinfectant and place on absorbent pad 	
	<ul style="list-style-type: none"> Attach microfiber to mop handle 	
	EvS Aide 2👤: Climb ladder and get in position to begin cleaning/disinfecting the ceiling	
	EvS Aide 1👤: Hand mop up to EvS Aide 2👤 on ladder	
	<p>EvS Aide 2👤: Using the ladder, clean/disinfect ceiling and upper third of wall (except the washroom) with the microfiber mop, working from the corner behind the patient door towards the patient head wall in a systematic fashion</p> <ul style="list-style-type: none"> Cleaning cloths will be needed to thoroughly clean any ceiling or upper wall fixtures such as television, lights, wall hooks and clock Perform glove hygiene as needed throughout process (prior to accessing new cleaning cloths and microfibres from the housekeeping pail, if visibly soiled, etc.) <p>Note: EvS Aide 1👤 to remain on standby to assist EvS Aide 2👤 by passing the mop and cleaning cloths as needed and moving furniture and equipment out of the way</p> <p>Perform glove hygiene</p>	
	EvS Aide 1👤 and EvS Aide 2👤: Exit and doff one at a time per Doffing Primary PPE checklist ; consider EvS Aide 2👤 to exit first	Rest break required

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Assess need for anteroom waste removal	
Walls	
<p>EvS Aide 1 : Move equipment to center of the room to allow access to walls and be on standby to hand EvS Aide 2  cleaning supplies if ladder is used</p>	<p>Wall fixtures observed to have dried body fluid soiling may require disposal. Consult Facility Management.</p> <p>Use ladder as needed to reach high areas and fixtures on walls</p>
<p>EvS Aide 2 : Clean/disinfect walls (except the washroom walls) using the microfiber mop going from clean to dirty, including as far up as can be comfortably reached, ensuring that overlap with the upper third of the wall is achieved. Pay attention to areas around ventilation openings</p>	
<ul style="list-style-type: none"> Clean/disinfect head wall and any other wall fixtures with cleaning cloths 	
<ul style="list-style-type: none"> Where there are concerns with equipment supported by Clinical Engineering, contact Clinical Engineering 	
<ul style="list-style-type: none"> Where there are concerns with items as part of the building (nurse call, electrical outlets), or serviced/supported by Facility Management Maintenance, contact Maintenance department. 	
<ul style="list-style-type: none"> Clean/disinfect all windows with cleaning cloths and dry windows immediately with clean dry cloth to prevent streaking, using ladder as required 	
<ul style="list-style-type: none"> Clean/disinfect cupboard and shelves using cleaning cloths 	Rest break required
Perform glove hygiene	
<p>EvS Aide 1  and EvS Aide 2 : Exit and doff one at a time per Doffing Primary PPE checklist</p>	
Assess need for anteroom waste removal	
Floor	
<p>EvS Aide 1  and EvS Aide 2 : Move all wheeled equipment/furniture (including the bed) over to the washroom side of the room so that after the wheels are cleaned and disinfected, they can be rolled across a disinfected floor</p>	
<p>EvS Aide 2 : Mop the floor on the opposite side of the room with disinfectant solution, cleaning/disinfecting from the furthest point toward the door</p>	
<ul style="list-style-type: none"> Discard microfiber in blue drum 	
<ul style="list-style-type: none"> Perform glove hygiene 	
Wheeled Furniture	
<p>EvS Aide 1 : Clean and disinfect all wheeled furniture, except the bed (e.g., IV poles, tables, etc.) one at a time following these steps:</p>	Use cloths soaked in disinfectant to clean/disinfect the room
<ul style="list-style-type: none"> Lay absorbent pad strip on floor 	
<ul style="list-style-type: none"> Soak absorbent pad with disinfectant solution 	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

	<ul style="list-style-type: none"> Place wheeled equipment/furniture on disinfectant pad, ensuring wheels contact the pad 	<p>Use each cloth one time only; do not re-use cloths (one surface, one disinfectant soaked cloth) Change absorbent pads as needed (i.e., when become oversaturated with disinfectant or there is visible soiling)</p>
	<ul style="list-style-type: none"> Clean equipment from top to bottom, inside and out, including wheels 	
	<ul style="list-style-type: none"> Pour disinfectant solution over the wheels 	
	<ul style="list-style-type: none"> Roll each wheel over the disinfectant pad for two full wheel rotations 	
	<ul style="list-style-type: none"> Move disinfected wheeled items (except bed) to clean side of room 	
	Repeat until all wheeled items have been disinfected	
	Perform glove hygiene	
	EvS Aide 2☉: Mop floor on the remaining side of the room (excluding washroom floor) with disinfectant solution, ensuring the entire floor has been disinfected	
	Move wheeled furniture (except bed) to the observation window area	
	EvS Aide 1◆ and EvS Aide 2☉: Exit and doff one at a time per Doffing Primary PPE checklist	
	Assess need for anteroom waste removal	
	Stretcher (if present)	
	EvS Aide 1◆ and EvS Aide 2☉: Working from the head to the foot of the stretcher using a cleaning cloth to disinfect the top and side section of the mattress closest to you	
	Pull the mattress forward sliding half of the mattress off the lower supporting frame. Lift the mattress into a vertical position, supporting the mattress with one hand	
	Clean the lower half of the underside of the mattress. Clean the mattress support	
	Lower the mattress to its original position using both hands	
	Locate the handle at the head of the stretcher and pull towards yourself. Raise the head of the stretcher to its highest level	
	Raise the stretcher to its highest level using the foot pedal	
	Clean the under carriage. Clean the lower section of the stretcher frame	
	EvS Aide 2☉: Repeat this cleaning method on the other side of the head of the stretcher	
	Clean the small shelf under the oxygen storage area	
	Raise the foot of the stretcher. Lift up the support bar at the foot of the stretcher	
	Fold the foot of the stretcher mattress. Wash the underside of the mattress support	
	Clean the lower section of the stretcher frame. Repeat this cleaning method on the other side of the foot of the stretcher	
	Raise the handrail and lock into place by lifting up and towards the foot	
	Clean the handrails. Repeat this handrail cleaning on the opposite side of the stretcher	
	Guide the handrail to its original position by depressing the “push” control lever	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

	Release stretcher brakes and move stretcher towards the door, ensuring all 4 wheels have contact with the disinfectant mat(s) for 2 full rotations
	Pour disinfectant over the wheels while they are on the disinfectant mat(s)
	Dispose of the disinfectant mat(s) into blue drum
	Perform glove hygiene
	BED
	EvS Aide 2☉: Release bed brakes
	EvS Aide 2☉ and EvS Aide 1◇: Move bed away from the wall so there is a clear path for working and movement around the bed without touching any walls, furniture and equipment.
	EvS Aide 2☉: Lock the brakes and raise bed to waist height of shortest person
	EvS Aide 2☉ and EvS Aide 1◇: With a person on each side of bed, clean top and sides of mattress
	EvS Aide 1◇ remove headboard and EvS Aide 2☉ remove footboard <ul style="list-style-type: none"> Place head/footboards on mattress and carefully disinfect all sides and edges top, back side and all edges Place head/footboards on floor against the disinfected wall
	EvS Aide 1◇ and EvS Aide 2☉: With a person on each side of bed, disinfect the mattress top and sides again, including the side edges of bed frame
	EvS Aide 1◇ to move to head of bed and EvS Aide 2☉ to move to foot of bed <ul style="list-style-type: none"> Together lift mattress into a vertical position EvS Aide 1◇: Move back to side of bed and support the mattress EvS Aide 2☉: Move back to opposite side and clean/disinfect top of the bed frame that is within reach EvS Aide 1◇ and EvS Aide 2☉: While supporting mattress in vertical position, move back to positions at head and foot of bed to lift and rotate (flip) the mattress so the clean top edge is resting on the clean/disinfected half of the bed frame EvS Aide 2☉: Move back to side of bed and support the mattress EvS Aide 1◇: Clean/disinfect the other half of bed frame and underside of the mattress
	EvS Aide 1◇ and EvS Aide 2☉: While supporting mattress in vertical position, move back to positions at head and foot of bed to slide mattress towards EvS Aide 1◇'s side of the bed <ul style="list-style-type: none"> EvS Aide 2☉: Support mattress at foot of bed EvS Aide 1◇: Return to side of bed and clean mattress top and side
	EvS Aide 1◇ and EvS Aide 2☉: While supporting mattress in vertical position, move back to positions at head and foot of bed to lift mattress off bed and place on floor to lean against wall

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

EvS Aide 2☉: Ensure EvS Aide 1◇ hands are free from bed and raise head and foot of bed to highest position ("V" shaped). Keep the bed at its highest raised position for UVGI process	
Wipe down all the remaining areas of bed frame including rails <ul style="list-style-type: none"> EvS Aide 1◇: Responsible for the head and left side of bed EvS Aide 2☉: Responsible for the foot and right side of bed 	
EvS Aide 1◇: Unplug bed, disinfect cord with disinfectant solution and place cord on bed	
EvS Aide 2☉: Release bed brakes	
EvS Aide 2☉: Lay the two 4-foot strips of absorbent pads down on floor, placing one at foot of bed and one at head of bed; soak both pads with disinfectant solution	
EvS Aide 1◇ and EvS Aide 2☉: Move bed back and forth so wheels contact the disinfectant pads for 2 full rotations	
<ul style="list-style-type: none"> EvS Aide 1◇: Pour disinfectant solution over the wheels while they are on the disinfectant pads 	
EvS Aide 1◇: Discard absorbent pads from floor at head and foot of bed into blue drum	
<ul style="list-style-type: none"> Perform glove hygiene 	
EvS Aide 2☉: Mop floor where the bed was originally located	
<ul style="list-style-type: none"> Discard used microfiber in blue drum 	
<ul style="list-style-type: none"> Perform glove hygiene 	
EvS Aide 1◇ and EvS Aide 2☉: Move bed back into position	
EvS Aide 2☉: Lock the brake	
EvS Aide 1◇: Lay new absorbent pad on floor and soak with disinfectant solution	
EvS Aide 1◇ and EvS Aide 2☉: Step on disinfectant mat one at a time to allow bottom of shoe/leg covers to contact disinfectant	
EvS Aide 1◇: Discard disinfectant mat in blue drum and perform glove hygiene	
EvS Aide 1◇ and EvS Aide 2☉: Exit and doff one at a time per Doffing Primary PPE Checklist	Rest break advised at this time although the need to doff may need to occur earlier
Assess need for anteroom waste removal	
Sink	
EvS Aide 2☉:	
Clean mirror and all dispensers prior to cleaning the sink	
Clean and disinfect faucet and sink, including outlet and overflow drain using the crevice brush as needed	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Turn on the tap using warm water to rinse away soil or cleansers	
Clean the underside of the sink including the surrounding walls and plumbing	
Perform glove hygiene	
Shower/Toilet Area:	
EvS Aide 2 (green circle): Lay absorbent pads on floor outside of washroom and soak with disinfectant solution	
EvS Aide 1 (blue diamond): Clean/disinfect any other remaining equipment in washroom (i.e., dolly), one at a time and place outside the washroom on the disinfectant mats	
EvS Aide 2 (green circle): Pour disinfectant over any wheeled items while on disinfectant mat and turn wheels for 2 full rotations and then move the equipment towards the window	<p>Monitor disinfectant solution in glove hygiene and change if becomes visibly soiled</p> <p>For safety, do not climb up and down the ladder with mop or cleaning supplies in hands</p> <p>Reposition glove hygiene table as needed to allow adequate space</p>
Perform glove hygiene	
EvS Aide 1 (blue diamond): Move ladder in to washroom/shower area and set up to begin cleaning the ceiling <ul style="list-style-type: none"> Climb the ladder 	
EvS Aide 2 (green circle): Prepare microfiber mop and hand to EvS Aide 1 (blue diamond) on ladder	
EvS Aide 1 (blue diamond): Clean/disinfect ceiling/walls with the microfiber mop using ladder	
EvS Aide 1 (blue diamond): Clean/disinfect ladder and place outside the washroom on the disinfectant mat	
EvS Aide 2 (green circle): Assist EvS Aide 1 (blue diamond) with cleaning feet of ladder while on disinfectant mat	
EvS Aide 2 (green circle): Move ladder off disinfectant mat towards window with other cleaned equipment	
EvS Aide 1 (blue diamond):	
Flush the toilet	
Discard toilet paper; key is on the dispenser to open	
Clean/disinfect walls using cloths versus microfiber mop	
Perform glove hygiene	
Clean the shower, starting with the shower fixture, shower head, grab bar and toilet paper dispenser	
Perform glove hygiene	
Remove any gross soil (if present) from the exterior of the toilet with disinfectant cloth	
Perform glove hygiene	
Clean the plumbing and flush handle	
Clean the top and underside of the toilet seat	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Clean the outer surfaces of the toilet bowl	
Perform glove hygiene	
Clean the inside of the toilet bowl and under the rim with the toilet swab	
Flush the toilet	
Dispose the swab and the plastic container in the blue drum	
Perform glove hygiene	
Place absorbent pad on floor and soak with disinfectant solution	
Attach new microfiber to mop handle using the absorbent pad	
Mop the floors with disinfectant solution	
Disinfect soles of both feet by stepping onto the absorbent pad	
Discard all used Environmental Services equipment in blue drum, including microfiber mop handle and pail <ul style="list-style-type: none"> NOTE: Glove hygiene basin to remain on set up on table 	
Perform glove hygiene	
EvS Aide 1 and EvS Aide 2 : Move all wheeled equipment to prepare area for waste management	
EvS Aide 1 and EvS Aide 2 : Exit and doff one at a time per Doffing Primary PPE Checklist	
Assess need for anteroom waste removal	

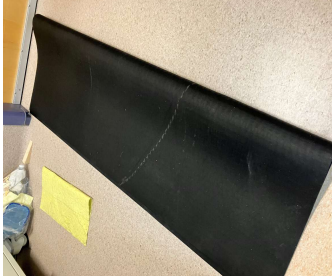
3. Monitor▲	
WASTE MANAGEMENT OF PATIENT ISOLATION ROOM AND ANTEROOM	Considerations
EvS Aide 3 ▲ and Assistant 1 Ω	
Assess and gather supplies needed for this step	
EvS Aide 3 ▲ will don PPE following the Donning Primary PPE checklist	
Enter patient room with new red biohazard waste bag and other supplies needed for waste management	
Place supplies on table	
Open up red biohazard waste bag, gather up sides and place down on floor with mouth of bag open. Use the red biohazard waste bag for discarding waste generated during waste removal process	
Perform waste management using Waste Removal Blue Drum Checklist . <ul style="list-style-type: none"> NOTE: Do not bring a new blue drum set up into patient room 	
After waste management complete, and dolly returned to room, perform glove hygiene	
Add solidifier to glove hygiene basin	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Place glove hygiene basin in red biohazard waste bag	
Gather top of red biohazard waste bag and pick up off the floor	
Enter anteroom with red biohazard waste bag	
Place red biohazard waste bag in blue drum in anteroom	
Perform glove hygiene	
Perform waste management using Waste Removal Anteroom Checklist . <ul style="list-style-type: none"> NOTE: Do not bring a new blue drum set up into the anteroom as indicated in Waste Removal Anteroom checklist 	
Doff PPE using red waste bin	

4. EvS Monitor ▽		
ANTEROOM CLEANING/DISINFECTION		Considerations
EvS Aide 3 and Assistant 1		If Aide 3 is beyond recommended timeframe of 20 minutes, Aide 1 or 2 could step in to complete anteroom cleaning
EvS Aide 3: Don PPE following the Donning Primary PPE Checklist		
Assistant 1: Don Assistant PPE following the Donning Assistant PPE checklist		
EvS Monitor ▽: Hold open anteroom door		
EvS Aide 3: Enter with housekeeping pail and bag of supplies and step onto Assistant mat		
Place pail and supplies on anteroom supply cart and set up for cleaning anteroom		
<ul style="list-style-type: none"> Fill pail with disinfectant solution 		
<ul style="list-style-type: none"> Soak absorbent pad in pail of disinfectant solution 		
<ul style="list-style-type: none"> Place absorbent pad on floor to use as a clean surface when attaching the microfiber to the mop handle 		
<ul style="list-style-type: none"> Place cleaning cloths and microfiber mop heads in the housekeeping pail 		
<ul style="list-style-type: none"> If needed, add more disinfectant to pail to ensure cloths and microfibers are saturated 		
<ul style="list-style-type: none"> Remove microfiber, squeeze out excess fluid, place on absorbent pad and attach to mop handle 		
Use mop to disinfect wall area where blue drum had been situated	Pay attention to good ergonomics and avoid over extending	
Mop floor area where blue drum had been situated		
Place mop away from disinfected area and lean against wall		
Perform glove hygiene		
EvS Monitor ▽: Open anteroom door		

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Assistant 1Ω: Enter anteroom with new blue drum without a lid	
<p>EvS Aide 3▲: Receive blue drum and place in the newly disinfected location of the anteroom</p> <ul style="list-style-type: none"> Note: no disinfectant mats needed underneath the blue drum 	
EvS Aide 3▲: Discard used microfiber from mop, second Assistant disinfectant mat and absorbent pads (except absorbent pad used for microfiber) in blue drum	
EvS Aide 3▲ and Assistant 1Ω: Discard the large black disinfectant mat following these steps:	
<ul style="list-style-type: none"> Fold mat in half lengthwise (see image in Considerations) 	
<ul style="list-style-type: none"> Fold mat in half a second time 	
<ul style="list-style-type: none"> Fold mat in half a third time 	
<ul style="list-style-type: none"> Carefully do a 2-person lift to place mat in blue drum 	
Perform glove hygiene	
Assistant 1Ω: Doff Assistant PPE per Doffing Assistant PPE checklist and exit anteroom	
EvS Aide 3▲: Attach a new disinfectant-soaked microfiber to mop handle	
<p>Clean/disinfect all the walls with the mop going from clean to dirty</p> <ul style="list-style-type: none"> Move equipment as needed Pay attention to areas around ventilation openings Use cleaning cloths and step stool as needed for hard to reach areas and fixtures (wall fixtures, grab bars, closers on doors, wall buttons, around sink) Discard used microfibers and cleaning cloths in the blue drum 	Use a two-step stool rated for 225-pound weight capacity if needed to reach high areas
Perform glove hygiene	
Sink	
Move glove hygiene table to allow room for cleaning area under the sink	
Move red waste bin away from sink area	
Clean all dispensers prior to cleaning the sink	
Clean and disinfect faucet and sink, including outlet and overflow drain using the crevice brush as needed	Change cleaning cloth as needed and perform glove hygiene before accessing new cloths.
Turn on the tap using warm water to rinse away soil or cleansers	
Clean the underside of the sink including the surrounding walls and plumbing	
Perform glove hygiene	
Take pail of supplies from supply cart and place on glove hygiene table and place any bagged supplies on floor	
Clean and disinfect all areas of supply cart, including inside of drawers	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

	Clean and disinfect all lower surfaces of the glove hygiene table Note: The top surface of the glove hygiene table will be cleaned in later steps	
	Move the supply cart to the sink side of anteroom	
	Place 2 new absorbent pads on floor on Assistant side	
	Saturate absorbent pads with disinfectant solution	
	Saturate microfiber, squeeze out excess fluid, place on absorbent pad and attach to mop handle	
	Mop the floor on the blue drum half of the anteroom with disinfectant solution while the moveable items are on the other side	
	Stand on absorbent pad while waiting for floor to dry	
	Place a new absorbent pad down on floor and soak with disinfectant solution	
	Roll all movable items (one at a time) onto the absorbent pad, pour disinfectant solution over wheels that are accessible and ensure wheels contact the absorbent pad for 2 full wheel rotations. Place on clean side of the anteroom	
	Discard used microfiber mop and absorbent pads in blue drum	
	Place 2 new absorbent pads on the disinfected side of the floor	
	Saturate microfiber, squeeze out excess fluid, place on absorbent pad and attach to mop handle	
	Stand on absorbent pad while mopping the other side of the anteroom. Allow floor to air dry	
	Step off the absorbent pad and place all absorbent pads and used microfiber into the blue drum	
	Dispose of all EVS equipment in blue drum, except for 2 or 3 saturated cleaning cloths	
	Perform glove hygiene	
	Pour solidifier into one glove hygiene basin and dispose basin in blue drum	
	Disinfect the exposed half of the glove hygiene table surface with the reserved cleaning cloth	
	Perform glove hygiene	
	Assistant 1Ω : Open anteroom door and pass in new basin, bottle of disinfectant solution and bottle of solidifier powder	
	Set new basin on disinfected side of glove hygiene table and fill with disinfectant solution; dispose empty bottle in blue drum	
	Pour solidifier powder in second dirty glove hygiene basin and dispose basin in blue drum	
	Perform glove hygiene in new basin	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Disinfect second half of top of glove hygiene table with a reserved cleaning cloth and move table back into position near sink	
Discard used cleaning cloth in blue drum	
Perform glove hygiene	
Assistant 1Ω donned in Assistant PPE to enter to assist EvS Aide 3▲ to perform waste management using Waste Removal Anteroom Checklist	
Once new blue drum is situated in anteroom, EvS Aide 3▲ to dispose red waste bin into the blue drum	
Assistant 1Ω and EvS Aide 3▲ to perform waste management again using Waste Removal Anteroom Checklist	Blue Drum will be 2/3rds full with the red waste bin
EvS Aide 3▲: Doff PPE per Doffing Primary PPE Checklist and discard items new blue drum	
EvS Aide 3▲ exit anteroom	
Assistant 1Ω: Doff PPE per Doffing Assistant PPE Checklist and place PPE in blue drum	
Exit anteroom	

5. EvS Monitor▽

ULTRAVIOLET GERMICIDAL IRRADIATION (UVGI) TREATMENT PATIENT ROOM	Considerations
EvS Aide 1◇	
Ensure 4 UVGI towers are placed in hallway just outside anteroom door	
Don Assistant PPE following the Donning Assistant PPE checklist	
Enter into patient room	
Place patient room door in 'Hold Open' position	
Return to anteroom and wait to receive the UVGI towers (x4) into the patient room	
EvS Monitor▽: Hold open anteroom door	
EvS Aide 2◎: Remaining in hallway, pass the towers to EvS Aide 1◇ one at a time	No PPE required for EvS Aide 2◎
EvS Aide 1◇: As towers are received, one at a time, roll them into patient room	
EvS Aide 1◇: Arrange UVGI towers around patient room	
Enter anteroom and close patient room door	
Doff Assistant PPE per Doffing Assistant PPE checklist .	
Exit anteroom	
EvS Monitor▽: Direct unit staff in hallway to cover the outside of the patient room windows to protect staff in hallway from UV light exposure	
EvS Monitor▽: Using tablet in the hallway, set timer for 25-minute cycle of UVGI	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

6. EvS Monitor ▾	
SECOND UVGI TREATMENT PATIENT ROOM	Considerations
EvS Aide 1 ⬠:	
Following first UVGI cycle, don new Assistant PPE per Donning Assistant PPE checklist	
Enter the patient room	
Flip mattress, headboard, and footboard around and rotate top to bottom without touching any other surface	
Lower mattress so it is completely horizontal (flat) and ensure bed is raised to highest position	
Exit room and doff Assistant PPE in anteroom per Doffing Assistant PPE checklist	
EvS Monitor ▾: Using tablet in the hallway, set timer for 25-minute cycle of UVGI	
Secure patient room for 1 hour following completion of the UVGI cycle	

7. EvS Monitor ▾	
FINAL WASTE REMOVAL ANTEROOM	Considerations
EvS Aide 1 ⬠ and EvS Aide 2 Ⓞ:	
Prepare supplies for performing final waste management of blue drum in anteroom. Supplies to include disinfectant wipes, solidifying powder, ABHR and small black garbage bag	EvS Aide 2 Ⓞ may assist with moving 2 UVGI towers into the hallway
Don Assistant PPE following the Donning Assistant PPE checklist	
Enter anteroom with supplies	
Ensure all remaining garbage is placed in the blue drum (ie, step stool if not discarded earlier)	
Pour solidifying powder in the remaining glove hygiene basin	
Place glove hygiene basin in blue drum	
Open small black garbage bag on glove hygiene table for receiving wipes used during waste management process	
Perform waste management using the Waste Removal Anteroom Checklist . <u>NOTE: do not bring in the new blue drum set up into anteroom. Instead, leave new blue drum in hallway by anteroom door</u>	
EvS Monitor ▾: Hold open the anteroom door and place new blue drum in close proximity to door opening, ensuring blue drum does cross the door threshold	
EvS Aide 2 Ⓞ: Place garbage bag with used wipes into blue drum	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

EvS Aide 2 ◊: Doff PPE following Doffing Assistant PPE checklist
NOTE: Discard PPE into blue drum in hallway at anteroom door.
Perform Hand Hygiene with ABHR and exit

EvS Aide 1 ◊: Doff PPE following Doffing Assistant PPE checklist.
NOTE: Discard PPE into blue drum in hallway at anteroom door.
Perform Hand Hygiene with ABHR and exit



8. EvS Monitor ▽

UVGI TREATMENT OF ANTEROOM	Considerations
EvS Aide 1 ◊:	
Don Assistant PPE per Donning Assistant PPE checklist	
Enter the patient room and remove all four UVGI towers. Place three towers in the hallway and leave one tower in the anteroom	
Set up the UVGI tower in the anteroom	
EvS Monitor ▽: Hold open the anteroom door and place hallway blue drum in immediate proximity to doorway	
EvS Aide 1 ◊: Doff Assistant PPE per Doffing Assistant PPE checklist and discard PPE in blue drum at doorway	
Perform hand hygiene with ABHR and exit anteroom	
EvS Monitor ▽: Using tablet in the hallway, set timer for 25-minute cycle of UVGI	

9. EvS Monitor ▽

SECOND UVGI TREATMENT OF ANTEROOM	Considerations
EvS Aide 1 ◊:	
Don Assistant PPE per Donning Assistant PPE checklist	
Rotate any equipment that can be moved to face the UVGI tower	
EvS Monitor ▽: Hold open anteroom door and place blue drum in immediate proximity to doorway	
Doff Assistant PPE per Doffing Assistant PPE checklist, using blue drum near doorway	

Isolation Room Discharge Cleaning by ENVIRONMENTAL SERVICES

Perform Hand Hygiene with ABHR and exit anteroom	
EvS Monitor▽: Using tablet in the hallway, set timer for 25-minute cycle of UVGI	
Secure patient room for 1 hour again following completion of the UVGI cycle	

10. EvS Aide 2Ⓞ

UVGI Tower Cleaning and Storage	Considerations
Perform hand hygiene and apply gloves	
Collect the 4 UVGI towers	
Disinfect UVGI tower frames with disinfectant wipes	
Doff gloves and perform hand hygiene	
Place UVGI towers in storage location	

11. EvS Aide 1◇

NOCOSPRAY DISINFECTION	Considerations
Bring Nocospray into patient room <ul style="list-style-type: none"> • Plug in and set volume to 400 mL • Press start button and exit room • Allow 60-minute contact time 	No PPE required
Once patient room complete, bring Nocospray into anteroom <ul style="list-style-type: none"> • Plug in and set volume to 400 mL • Press start button and exit room • Allow 60-minute contact time 	

12. EvS Aide 1◇

AESTHETIC CLEAN
<ul style="list-style-type: none"> • Don Standard PPE • Perform aesthetic clean to remove any chemical residues throughout patient room and anteroom